




Disruption of Service – Small Systems Flowchart

This flowchart outlines the disruption of service response requirements for all transient noncommunity (TNC) public water systems (PWSs) and nontransient noncommunity (NTNC) PWSs serving a population under 1,000. NTNCs should contact Ohio EPA for direction if any lead will remain in the affected area after repairs are complete.

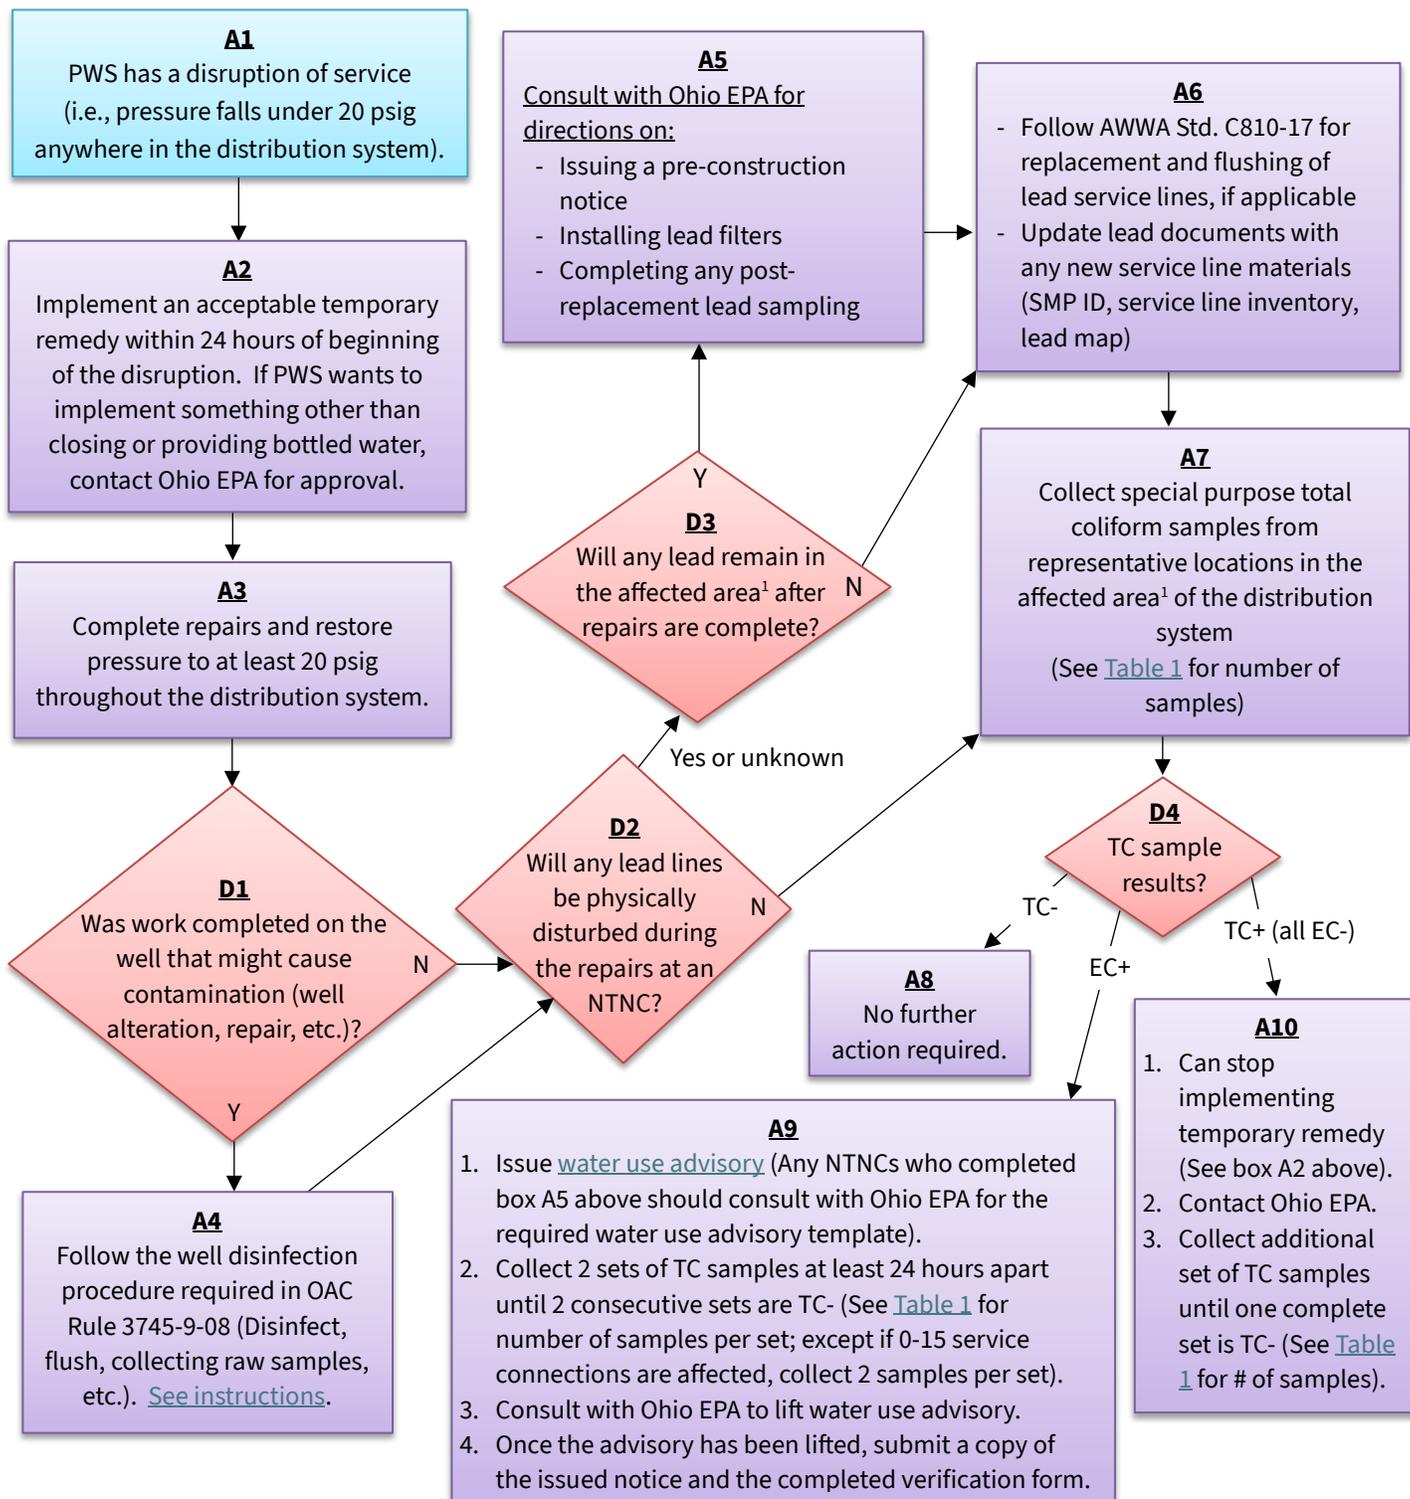

¹Affected area = Portion of the distribution system where the pressure of the system has dropped below 20 psig at ground level.