


Scenic River Stream Bank Illustration and Definition:

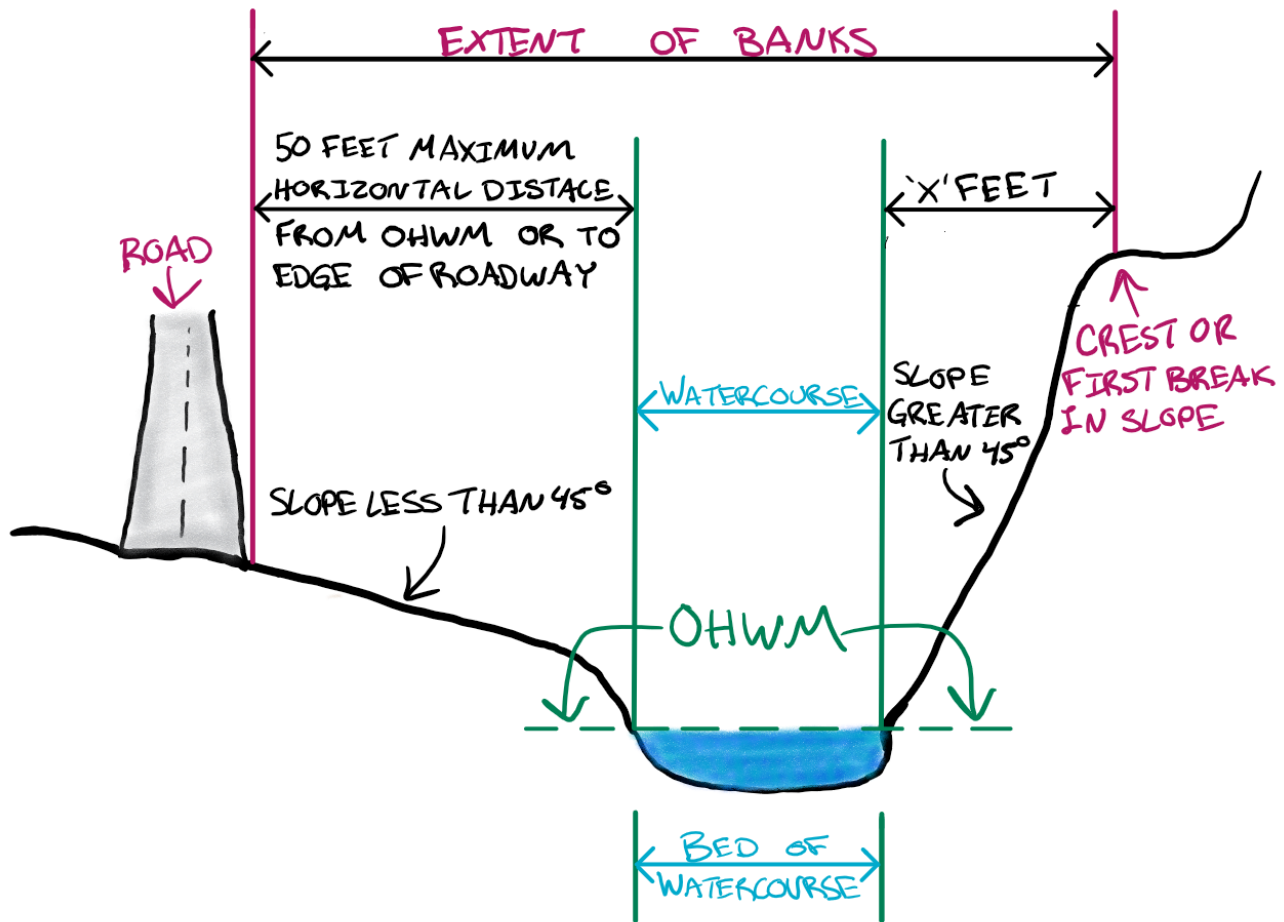

Stream bank is defined as the land area immediately adjacent to, and which slopes toward, the bed of a watercourse and which is necessary to maintain the integrity of a watercourse. A bank will not be considered to extend further than 50 feet horizontally from the ordinary high water mark, with the following exception: Where a generally uniform slope of 45 degrees (100%; 1:1) or greater adjoins the bed of the watercourse, the bank is extended to the crest of the slope or the first definable break in slope, either a natural or constructed (i.e. road or railroad grade) feature, lying generally parallel to the watercourse. If a roadway occurs within 50 feet (measured horizontally) from the ordinary high water mark, the edge of roadway closest to the waterway will define the extent of the bank and serve as the stream bank limit.